

## DA-123/HF Instruction Manual

### Setup

1. Using the telephone line cord supplied, plug one end into the unit's **Data** jack (located on the rear), and the other end into the system or phone jack.
2. Connect the power adapter to the A/C jack on the unit's right side.
3. Lift the dialer directory card and plastic off the top. Remove the plastic tab from underneath. This activates the internal battery for dialer memory.
4. Plug the foot control into the handset jack on the left side of the unit.

### DIP Switches:

On the bottom of the unit there are two DIP switches (in a group of two). To see the group of two dip switches, you must slide the plastic cover down.

**DIP Switch 1:** On=Enables Auto-Log for dialer #10.

**DIP Switch 2:** On=Shorten Record Delay

### Auto-Log

One-touch dialer #10 (bottom right) is used for the Auto-Log feature. If DIP switch #1 is on, whatever is programmed to this dialer will automatically be dialed after 1 second. This could be a phone number or perhaps user ID.

### Flash

On the back of the unit is a switch labeled **FLASH**. There are three options: **600**, **300**, or **100**. Always leave it to **600** or you may have issues with the **DISCONNECT** function.

### Programming Dialers:

Before proceeding, verify that you have followed **Setup steps 1-3** and that **DIP switch 1 is off**.

1. Press **Log On** and then connect to your system (this may require entering a user ID and/or dialing the telephone number and entering a User ID).
2. Press **Store**.
3. Dial the number(s) you wish to have stored.
4. Press the one-touch dialer you desire to program.

Repeat steps 2-4 for additional dialers.

### Emulation

There are 5 different emulations for this model. The emulation determines what processor your unit has and thereby what digits are sent with certain functions.

**C-Phone** will have **-C** at the end of the model (DA-123/HF-C).

**DVI** will have **-D** at the end of the model (DA-123/HF-D).

**Lanier** will have **-L** at the end of the model (DA-123/HF-L).

**Winscribe** will have **-W** at the end of the model (DA-123/HF-W).

**Voice Solutions** will have **-S** at the end of the model (DA-123/HF-S).

Name	Processor	Record	Rewind	Play	Stop	New Job
C-Phone	M123D	D	7	B	B	8
DVI	M123B	D	B	3	A	*9
Lanier	M124M	2	3	1	4	5
Winscribe	M124W	1	7	2	8	5
Voice Solutions	M124B	D	B	C	A	**

**NOTE:** You can see the processor version on a sticker located on the bottom of the unit. To see it, you must slide the plastic cover down.